

Item _____

Number _____

DELI GROUP CO., LTD.

301 Xuxiaoke Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com





Version: 1.0
Date: 12-2019

Keep For Future Use

deli

U DIGITAL CODE SERIES SER'S MANUAL

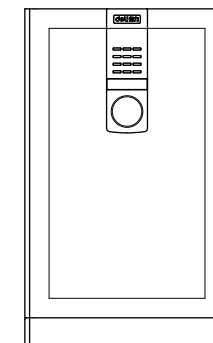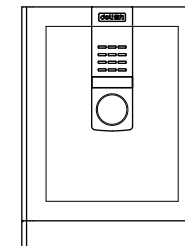

■ Easy Operation ■ Simple Use ■ Reliable Safe

Dear customers, thank you for your purchase of our products. We are committed to providing our customers with high quality products. To ensure best performance, please read this manual carefully before use!


1. Unpacking the product	01
2. Product Overview.....	02
3. Opening your safe for the first time.....	03
4. Installing the batteries.....	03
5. Setting the passcode.....	04
6. Opening and closing the door	04
7. Hiding passcode visibility.....	05
8. Deleting incorrect passcode.....	05
9. Alarm function.....	05
10. Replacing the batteries.....	06
11. Opening your safe with the emergency key	07
12. Query door-opening records.....	07
13. Change the system date	08
14. Restore factory settings	09
15. Precautions for use	09
16. Troubleshooting.....	11

Contents


1. Unpacking the product

Please check if the product is intact after unpacking and verify that all the accessories have been received. If any items are missing, please contact your dealer.

 
User manual *1




Master key*2

 


Emergency key *2

 

Expansion bolts* 2

 


Battery compartment *1

 

AA Battery *4



 Interior door key*2



Note: There will be no interior door keys if your safe has no interior door.

3. Opening your safe for the first time


1. Push the slide cover of the door lock down to the defined position and press the emergency lock flap;
2. Insert the door key and the emergency key into their corresponding keyholes. Turn your emergency key clockwise first, then turn your door key clockwise to open the door. (If your safe has no knob, just turn the door key clockwise to open the door)

4. Installing the batteries (You are required to use alkaline battery)


1. Insert 4 x AA batteries into the battery compartment at the back of the door, ensuring that the batteries match the + and - in the compartment. Once powered on, "□" will appear on the display and scan back and forth from left to right. It stops scanning after a good read and displays "Good", then it goes into Standby mode.
2. Insert the door key and press the "#" button to wake your safe up. Input the factory default passcode "12345678" when "-----" appears on the display.
3. Press the "#" button to confirm, and "OPEN" will appear on the display, then please turn the master key clockwise to open the door within 6 seconds.

2. Product Overview


Front panel

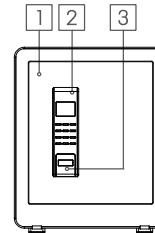

Side panel (while the door is open)

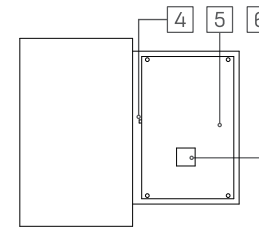

Schematic Drawing of Control Panel

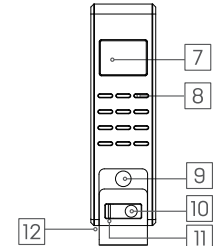

#	1	2	3	4	5	6
Part Name	Body	electronic keypad	slide cover of the door lock	reset passcode button	back cover	battery compartment

#	7	8	9	10	11	12
Part Name	display	button	door lock	emergency lock	emergency lock cover	external power jack

5. Setting the passcode

The default password "12345678". For security of your property, you will need to change the preset code before use.

1. Input any fingerprint or press the "#" button to wake the panel up. Input the factory default passcode "12345678" and press the "#" button to confirm; "Open" shall appear on the display with a voice prompt saying Successful verification, please open the door"
2. Press the Reset button within 25 seconds after "OPEN" disappears, and "Add" will appear on the display with a voice prompt saying "Please input a new passcode";
3. Input a passcode of 1 to 8 digits, and press the "#" button to confirm. If "Into" appears on the display with a voice prompt saying "New passcode accepted", this means the setting of new passcode is complete.

Tips: When you are done setting your passcode, please try the new code to make sure it works.

6. Opening and closing the door

1. Close the door;
2. Turn the master key counterclockwise and pull it out.

7. Hiding passcode visibility

1. While the panel is active, press the "*" button first, then input your password, and the screen will show "o" rather than numbers.
2. When the safe is unlocked, it resumes digital display automatically.

8. Deleting incorrect passcode

Press the "*" button when you inputted an incorrect code, one "*" button press will delete one character.

9. Alarm function

1. Wrong passcode Alarm

Every time you enter a wrong passcode, "Error" will appear on the display and then "-----" appears again, indicating you may re-enter your passcode. If you input a wrong passcode

3 times, an alarm horn icon will appear on the display and the alarm will sound for 1 minute, which can be stopped when you input the correct passcode.

2. Vibration alarm

Press the "0" button while in Standby mode, if "ALERT ON" appears on the display, it means the vibration alarm is on. When the safe is shaken by external forces, an alarm horn icon will appear on the display and the alarm will sound for 1 minute. The alarm will be stopped and the vibration alarm mode will be turned off when you input the correct passcode or fingerprint.

10. Replacing the batteries

When the voltage of the built-in batteries drops below a certain level, "Lo bat" will appear on the display every time you input your passcode. It indicates that the battery is low, please replace the batteries as soon as possible. (AA alkaline battery is recommended)

11. Opening your safe with the emergency key

1. If you cannot operate the safe when the batteries are dead, please use an external battery compartment. Put the plug of an external battery compartment into the power socket on the bottom panel, then input your correct passcode to open the door.
2. Unlock your safe with your master key in case passcode forgot or failure of electronic system. Unlock your safe the way you open it for the first time.

12. Query door-opening records

1. First open the door with your passcode, when "Open" appears on the display, press "0" and "8" to query previous opening records which will be displayed in two screens;
2. The first screen will be displayed first: Passcode Type (such as: "PASS-1"/"PASS-2") and Record Number (such as: "NO 01"- "NO 58")
3. Then the second screen will show: the opening date and time of the records;
4. Record page up / down: while in Record Query mode, press "0" for record number +1 and press "8" for record number-1;
5. Record Query mode will exit to Standby mode if no button was pressed within 3 seconds.

6. The system stores up to 58 most recent records. If there are more than 58 records, every time you add a new record, it will overwrite the oldest record. Each record includes the following information: year, month, date, hour, minute, record number (1=the most recent, 2= the second most recent.....58= the 58th most recent), passcode type(1=personal passcode, 2= admin passcode)

13. Change the system date

1. While in standby mode, press the "*" button to change the system date and time;
2. Input the numbers directly for "Year" - "Month" - "Date" - "Hour" - "Minute" (10 digits in total), the corresponding fields flash and confirm automatically, then save the new time and exit setup mode to return to standby mode.
During setup, you may press the "*" button to remove the last character and then re-enter;
4. The system will determine the validity of a number inputted. Invalid values exceeding the range will not be confirmed. The effective range of each parameter is as follows:
Year: 00~99, Month: 01~12, Day: 01 ~31, Hour: 00~23, Minute: 00~59;
5. Note: When you are setting the date, the system cannot distinguish if a month has 31 days or less, or if there is a leap month. Users must enter a date that makes sense and don't input a date like "Feb 30th" which does not exist.

6. While you are making changes, if no button is pressed within 8 seconds, it will exit change mode (the changed values will become invalid) to return to standby mode;

7. Year 2010-2099 calendar has been embedded and the system adjusts automatically during leap years or months with less than 31 days.

14. Restore factory settings

Open the box door, press the "#" key to wake up the panel, press and hold the code changing key, disconnect the power, and then turn the power on, wait for the screen to display "clear", release the code changing key, the settings have been successfully restored, and the password has been restored to "12345678". To ensure safety, please set a new password in time.

15. Precautions for use


1. Do not put the user manual, master keys and emergency keys and battery compartment inside the safe, and please keep them in another secure place.

2. To prevent battery leakage from damaging the electrical system, do not remove batteries from the safe if it will be unused for extended periods of time.

3. For safety reasons, be sure to mount your safe to a solid concrete wall;

4. Do not store excess cash and valuables if the safe is unattended or placed without any remote alarm.

Installation Diagram

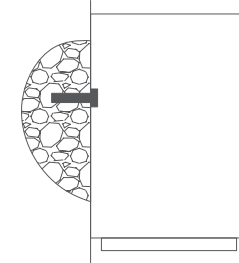

16. Troubleshooting

Problem	Possible Cause	Solution
The scanner is not responding when I input my passcode	The battery is dead	Unlock the electronic lock with the battery compartment or with the emergency key, then replace the batteries
	Positive and negative polarity on the battery is reversed	Please install the batteries properly
	Circuit board failure	Please contact our repair department
I couldn't insert or pull out the master key	There are obstructions in the lock	Please remove the obstructions in the lock
	The key was not turned to the defined position	Please insert the key properly
The safe won't open when I have unlocked the electronic code lock	The knob was not turned to the defined position. Turn the knob and hold it for more than 7 seconds, and the electronic lock will be reset	Please re-enter your passcode and turn the knob to the defined position
The alarm doesn't go off	The battery is dead	Please replace the batteries
	Positive and negative polarity on the battery is reversed	Please install the batteries properly

Warranty Card

Dear customers,

Thank you for your purchase of our products. To protect the interests of customers who purchase our products, please contact authorized local dealers or service centers with this receipt and the warranty card for any malfunction due to product quality problems.

Warranty terms:

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.

2. Customers are required to present this warranty card and the original purchase invoice to the Company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.

3. No free of charge repair service shall be provided in the event of any of the following circumstances:

(1) Expiration of the warranty period;

Warranty Card

(2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;

(3) Failure or damage caused by force majeure;

(4) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: __MM__DD__YYYY

Warranty Card

Product Information	Product Name		Date of Manufacture		
	Product Model Number		Date of Production		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Sales Name		Contact		
	Address		Phone		
	Sales Date		Invoice No.		
Repair Form	Problem	Repair Results	Maintenance Technician Signature	Customer Signature	Date

Warranty Card

Product Information	Product Name		Date of Manufacture		
	Product Model Number		Date of Production		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Sales Name		Contact		
	Address		Phone		
	Sales Date		Invoice No.		
Repair Form	Problem	Repair Results	Maintenance Technician Signature	Customer Signature	Date

Cut along the line and keeping by the dealer