

Item _____

Number _____

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com




Version: 1.0
Date: 12-2019

Dear customers, thank you for your purchase of our products. We are committed to providing our customers with high quality products. To ensure best performance, please read this manual carefully before use!

Keep For Future Use

deli

U FINGERPRINT & DIGITAL CODE PRODUCTS SER'S MANUAL

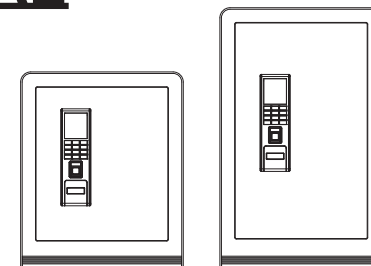


■ Easy Operation ■ Simple Use ■ Reliable Safe

1. Unpacking the product.....	01
2. Product Overview.....	02
3. Opening your safe for the first time.....	03
4. Installing the batteries.....	03
5. Setting the passcode.....	04
6. Registering a fingerprint.....	05
7. Deleting the registered fingerprint.....	06
8. Opening the door.....	06
9. Hiding passcode visibility.....	09
10. Deleting incorrect passcode.....	09
11. Sound On/Off.....	09
12. Alarm function.....	10
13. Replacing the batteries.....	11
14. Opening your safe with the emergency key.....	11
15. Precautions for use.....	12
16. Troubleshooting.....	13

Contents

1. Unpacking the product

Please check if the product is intact after unpacking and verify that all the accessories have been received. If any items are missing, please contact your dealer.

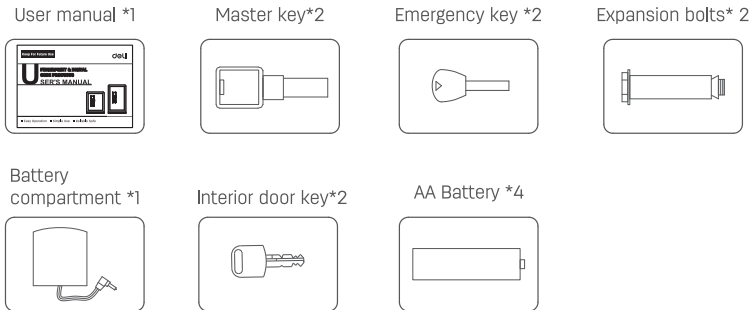

Note: There will be no interior door keys if your safe has no interior door.


3. Opening your safe for the first time

1. Push the slide cover of the door lock down to the defined position and press the emergency lock flap;
2. Insert the door key and the emergency key into their corresponding keyholes. Turn your emergency key clockwise first, then turn your door key clockwise to open the door. (If your safe has no knob, just turn the door key clockwise to open the door)

4. Installing the batteries (You are required to use alkaline battery)

1. Insert 4 AA batteries into the battery compartment on the back of the door, making sure that the batteries match the + and - in the compartment. Once powered on, your safe will emit a single beep;
2. Input the factory default password "12345678".
3. Press the "#" button to confirm, and "OPEN" shall appear on the display, then rotate the knob clockwise to open the door within 6 seconds.

2. Product Overview

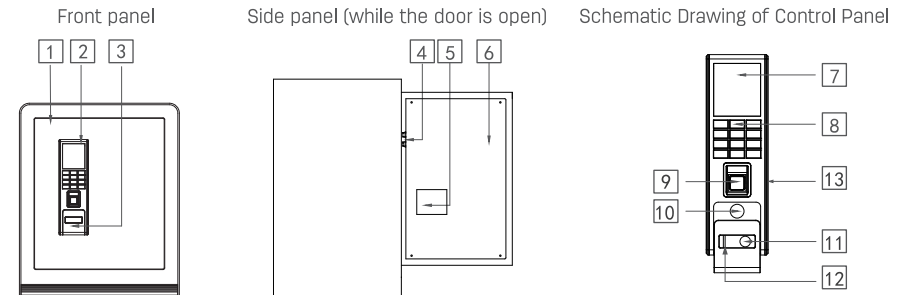

#	1	2	3	4	5	6	7
Part Name	Body	electronic keypad	slide cover of the door lock	reset passcode/fingerprint button	battery compartment	back cover	display

#	8	9	10	11	12	13
Part Name	button	fingerprint scanner	door lock	emergency lock	emergency lock cover	external power jack

5. Setting the passcode

The default password "12345678". For security of your property, you will need to change the preset code before use.

1. Input any fingerprint or press the "#" button to wake the panel up. Input the factory default passcode "12345678" and press the "#" button to confirm; "Open" shall appear on the display with a voice prompt saying "Successful verification, please open the door"
2. Press the Reset button within 25 seconds after "OPEN" disappears, and "Add" will appear on the display with a voice prompt saying "Please input a new passcode";
3. Input a passcode of 1 to 8 digits, and press the "#" button to confirm. If "Into" appears on the display with a voice prompt saying "New passcode accepted", this means the setting of new passcode is complete.

Tips: When you are done setting your passcode, please try the new code to make sure it works.

6. Opening and closing the door

There is no fingerprint registered before delivery, to ensure security, please add your fingerprint before use.

1. Input any fingerprint or press the "#" button to wake the panel up. Input the factory default passcode "12345678" and press the "#" button to confirm. "Open" shall appear on the display with a voice prompt saying "Successful verification, please open the safe";

2. Press the Reset button within 25 seconds after "OPEN" disappears, and "Add" shall appear on the display with a voice prompt saying "The fingerprint has been registered successfully", in the meantime, "Intro" shall appear on the display, this indicates that your registration is successful.

※ Before you register a fingerprint, any fingerprint can open the safe.

※ Stores up to 32 fingerprints

※ If the registration fails, you will hear a voice prompt saying "Verification failed", please repeat the steps above to register again.

Note: When you are done registering a fingerprint, please try the new fingerprint to make sure it works.

7. Deleting the registered fingerprint

1. Input any fingerprint or press the "#" button to wake the panel up. Input the factory correct passcode and press the "#" button to confirm. "Open" shall appear on the display with a voice prompt saying "Successful verification, please open the safe".

2. Press and hold the Reset Fingerprint button for 3 to 5 seconds within 25 seconds after "OPEN" disappears, and you will hear a voice prompt saying "All fingerprints are deleted, please add a new fingerprint in time". The screen shall show "Fn-CLE" and all the registered fingerprints have been deleted in the meantime.

※ After you delete all fingerprints, any fingerprint can open the safe.

8. Opening the door

※ Opening the door with passcode

1. Press the "#" button to wake the panel up, and cursor "-----" appears. Input a specific code of 1 to 8 digits and press the "#" button to confirm;

※ Opening the door with passcode

1. Press the "#" button to wake the panel up, and cursor "-----" appears. Input a specific code of 1 to 8 digits and press the "#" button to confirm;

2. Upon successful verification, "Open" shall appear on the display "with a long beep afterwards" "Successful verification, please open the safe." then turn the master key and the knob to open the door.

※ Opening the door with fingerprint

1. Place your finger on the fingerprint scanner and the scanner light is on, hold your finger until the green light turns off with a beep indicating fingerprint comparison is done.

2. Upon successful verification, "Open" shall appear on the display "with a long beep afterwards" "Successful verification, please open the safe." then turn the master key and the knob to open the door.

※ Opening the door with fingerprint and passcode

1. By default, you may unlock your safe with either your passcode or your fingerprint. To enable passcode + fingerprint compound authentication, please press and hold the "Reset Passcode" button for more than 3 seconds within 25 seconds after you open the

door. Then you will hear a voice prompt saying "compound authentication enabled" and "tYPE1" will appear on the display indicating passcode + fingerprint compound authentication is enabled.

2. While this function is enabled, you will need to input either the correct passcode or your fingerprint, then verify using the other method to unlock the door; then turn the master key and the knob to open the door.

3. To disable this function, please press and hold the "Reset Passcode" button for more than 3 seconds within 25 seconds after you open the door. Then you will hear a voice prompt saying "Compound authentication disabled" and "tYPE2" will appear on the display indicating passcode + fingerprint compound authentication is disabled.

Note: 1. Compound authentication will be disabled automatically after you replace the batteries, and you need to enable this function again.

2. Five continuous incorrect entries will lock out the safe for 15 minutes.

9. Hiding passcode visibility

1. While the panel is active, press the "*" button first, then input your password, and the screen will show "o" rather than numbers.
2. When the safe is unlocked, it resumes digital display automatically.

10. Deleting incorrect passcode

Press the "*" button when you inputted an incorrect code, one "*" button press will delete one character.

11. Sound On/Off

Press the "#" button to wake the panel up, and press the "#" button again to enable or disable Sound.

13. Replacing the batteries

With the safe open, if the battery is low, the buzzer will emit 10 short beeps with a voice prompt saying "Low battery, please replace the batteries" and "LoBat" will appear on the display. This means the battery is low, please replace the batteries in time. (AA alkaline battery is recommended)

14. Opening your safe with the emergency key

1. If you cannot operate the safe when the batteries are dead, please use an external battery compartment. Put the plug of an external battery compartment into the power socket on the bottom panel, then input your correct passcode to open the door.
2. Unlock your safe with your master key in case passcode forgot or failure of electronic system. Unlock your safe the way you open it for the first time.

12. Alarm function

※Wrong passcode or fingerprint alarm

1. If the fingerprint verification fails, "Error" will be displayed on the screen with a voice prompt saying "Authentication failed, please try again";
2. If you fail to verify your fingerprint after 5 times, an alarm will be triggered and last for 20 seconds. The alarm will be turned off after you input the correct fingerprint.
3. If the passcode verification fails, "Error" will be displayed on the screen with a voice prompt saying "Authentication failed, please try again";
4. If you fail to verify your passcode after 3 times, an alarm will be triggered and last for 20 seconds. The alarm will be turned off after you input the correct passcode.


※Vibration alarm

1. Press the "*" button while in Standby mode, and you will hear a voice prompt saying "Vibration Alarm On" with "ALOn" displayed, indicating that vibration alarm mode is on. Vibration alarm mode will be off once the door is opened properly.
2. The alarm will be stopped and the vibration alarm mode will be turned off when you input the correct passcode or fingerprint.

15. Precautions for use

1. Do not put the user manual, master keys and emergency keys and battery compartment inside the safe, and please keep them in another secure place.
2. To prevent battery leakage from damaging the electrical system, do remove batteries from the safe if it will be unused for extended periods of time.
3. For safety reasons, be sure to mount your safe to a solid concrete wall;
4. Do not store excess cash and valuables if the safe is unattended or placed without any remote alarm.

Installation Diagram

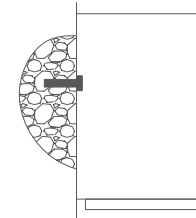

16. Troubleshooting

Problem	Possible Cause	Solution
The scanner is not responding when I input my passcode	The battery is dead	Unlock the electronic lock with the battery compartment or with the emergency key, then replace the batteries
	Positive and negative polarity on the battery is reversed	Please Install the batteries properly
	Circuit board failure	Please contact our repair department
I couldn't insert or pull out the master key	There are obstructions in the lock	Please remove the obstructions in the lock
	The key was not turned to the defined position	Please insert the key properly
The safe won't open when I have unlocked the electronic code lock	The knob was not turned to the defined position Turn the knob and hold it for more than 7 seconds, and the electronic lock will be reset	Please re-enter your passcode and turn the knob to the defined position
The alarm doesn't go off	The battery is dead	Please replace the batteries
	Positive and negative polarity on the battery is reversed	Please install the batteries properly

Warranty Card

(2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;

(3) Failure or damage caused by force majeure;

(4) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: __MM__DD__YYYY

Warranty Card

Dear customers,

Thank you for your purchase of our products. To protect the interests of customers who purchase our products, please contact authorized local dealers or service centers with this receipt and the warranty card for any malfunction due to product quality problems.

Warranty terms:

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.

2. Customers are required to present this warranty card and the original purchase invoice to the Company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.

3. No free of charge repair service shall be provided in the event of any of the following circumstances:

(1) Expiration of the warranty period;

Warranty Card

Product Information	Product Name		Date of Manufacture		
	Product Model Number		Date of Production		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Sales Name		Contact		
	Address		Phone		
	Sales Date		Invoice No.		
Repair Form	Problem	Repair Results	Maintenance Technician Signature	Customer Signature	Date

Warranty Card

Cut along the line and keeping by the dealer

Product Information	Product Name		Date of Manufacture		
	Product Model Number		Date of Production		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Sales Name		Contact		
	Address		Phone		
	Sales Date		Invoice No.		
Repair Form	Problem	Repair Results	Maintenance Technician Signature	Customer Signature	Date